ENGLISH

MAXTRON NX500 User's Manual

Importance (please read carefully before using this product)

- Thank you for purchasing our product.
- To get the most from your NX500, please read this manual thoroughly.

Product Specifications

Model	NX500
Capacity	5000mAh
Input Voltage	DC5.0V
Input Current	Max. 1000mA
Output Voltage	DC5.0V ±0.2V
Output Current	Max. 2.6A
Weight	137.6g (not including accessories)
Dimensions	106.0mm × 61.5mm × 13.6mm

Operating Instructions

1.1 NX500 Power Bank

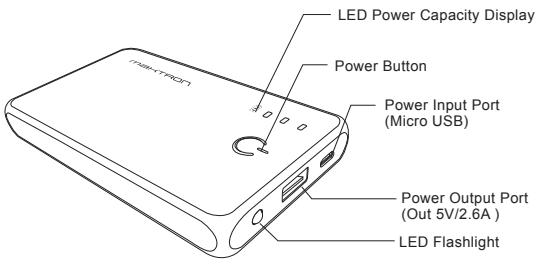

1.2 Charging NX500 (Charging Mode)

Charging NX500 via a USB port of a computer :

- Connect the Micro USB connector of the USB Connection Cable to the Power Input Port of NX500.
- Connect the USB connector of the USB Connection Cable to the USB port of a computer [see Figure (1)].

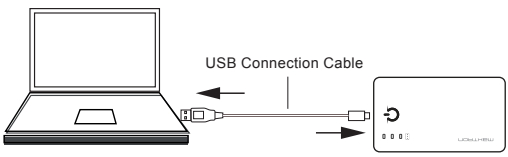

Figure (1)

- When NX500 is in the charging mode, the LED Power Capacity Display lights up repeatedly from left to right. Upon completion of the charging process, the rightmost signal light of the LED Power Capacity Display will turn on [see Figure (2)].

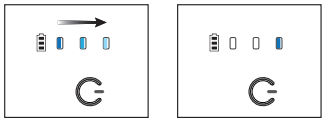

While charging **100% Charged**

Figure (2)

1.3 Charging Digital Devices with NX500 (Power Mode)

1. Using the USB Connection Cable provided for charging a digital device:
   - Connect the USB connector of the USB Connection Cable to the Power Output Port of NX500.
   - Connect the Micro USB connector of the USB Connection Cable to the Power Input Port of the digital device [see Figure (3)].

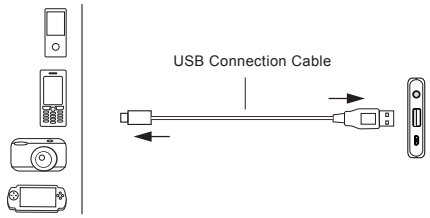

Figure (3)

2. If the USB Connection Cable provided is not compatible with the digital device, connect NX500 and the digital device with the proprietary USB Connection Cable sold with the digital device for charging [see figure (4)].

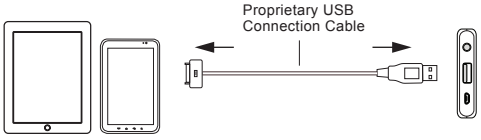

Figure (4)

3. Press the Power Button to start charging.
4. To check for the current battery level, press the Power Button once when NX500 is in the power mode or switched off [see figure (5)].

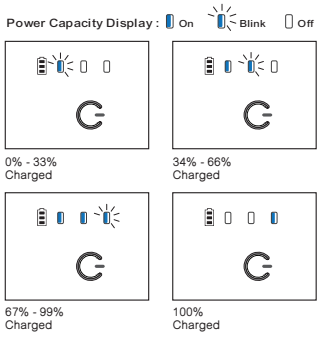

Figure (5)

5. Press the Power Botton twice to open the LED Flashlight.

Cautions

- NX500 contains lithium Ion material, please handle with caution.
- Confirm the input voltage of the digital device before charging.
- NX500 and its accessories are not toys for children and infants.
- Do not use NX500 near a fire or in a high temperature condition.
- Do not disassemble or modify any parts of NX500.
- Use NX500 only in dry condition. Keep away from rain, snow or excessive moisture.
- Do not operate a damaged NX500.

Technical Support & Customer Service

For technical questions or inquiries, please contact your local authorized dealers.

Maxtron USA
2033 Gateway Place, Suite 500
San Jose, CA 95110, USA

Customer Service (US / Canada Toll Free) :

1-800-935-0861

www.maxtronpower.com

Version 1.0
Copyright © 2014 Maxtron. All Rights Reserved.

D13867-UM-ENG-r2